



PLEXWRITER 8/4/32™

Model PX-W8432Ti (Internal)

Congratulations!

Thank you for purchasing the PlexWriter 8/4/32, a reliable, high-performance CD rewriter, recorder and reader. We appreciate the confidence you have shown in us. Our goal is to put you—and keep you—on the leading edge of CD technology.

To get you there, we first have to help you install your PlexWriter drive properly and operate it correctly. After that, the responsibility is yours to seek the applications that make rewritable CD such a powerful and exciting addition to your system.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications should be approved by the party responsible for compliance of FCC Rules; otherwise, the user loses authority to operate the equipment.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The laser beam emitted from the optical pickup is invisible. Accordingly:

- Do not open the optical pickup housing.
- Obtain service only from Plextor-authorized personnel.

LASER INFORMATION

These products have been designed and manufactured according to IEC 825-1 on the Safety of Laser products. This product comes under "Class 1 Laser Products." A Laser Caution Marking is attached on the top of the internal drive model: "Caution: Invisible laser radiation when open. Avoid direct exposure to beam."

CAUTION: To disconnect the CD drive from an electrical current, pull out the power plug.

VORSICHT: DIE TRENNUNG VOM NETZ ERFOLGT DURCH ZIEHEN DES NETZSECKES.

Zur Einhaltung der Funk-Entstörung von nicht selbständig betreibbaren Hochfrequenzgeräten (periphere Anlagenkomponenten).

Dieses Gerät entspricht als Einzelgerät den Funk-Entstöranforderungen der Postverfügung Nr. 243/1991.

Wird das Gerät innerhalb einer Anlage zusammen mit anderen Geräten betrieben. So muß bei Inanspruchnahme der "Allgemeinen (Betriebs-) genehmigung" nach der BMPT-AmtsblVfg Nr. 243/1991 die gesamte Anlage folgenden Richtlinien entsprechen:

- Grenzwertklases B der EN55022
- Auflagen nach § 2 der BMPT-AmtsblVfg 243/1991

Dies ist bei der Zusammensetzung einer Anlage (z.B. Computersystem) aus nur einzeln geprüften Geräten nicht immer erfüllt.

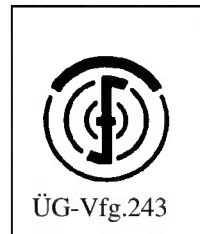


Table of Contents

1. Getting Started.....	1
About this Manual.....	1
Meet Your PlexWriter 8/4/32	1
What the PlexWriter 8/4/32 Does.....	1
What You Can Do with the PlexWriter 8/4/32.....	2
Save Your Box!.....	3
What's in the Box	3
PlexWriter Drive Features and Controls.....	4
Front Panel.....	4
Rear Panel.....	5
About Mastering Software.....	5
Precautions	6
2. Installing Your PlexWriter	7
QuickStart Installation—For Experienced PC Users Only	7
Open the Computer and Prepare for Installation.....	7
Determine Your Existing IDE Configuration	8
Set the Drive's Jumpers.....	9
Changing the Jumper on Your Internal PlexWriter Drive.....	9
Select an IDE Configuration	10
About Cable Select.....	12
Install the PlexWriter Drive	12
Record the Serial Number	12
Mount the PlexWriter Drive in the Computer	12
Using Soundboards and Audio Cables	17
Choosing and Connecting Audio Cables	17
Make Sure the Drive Is Recognized.....	17
Enable DMA.....	19
3. Installing and Using Software.....	21
Install Device Drivers.....	21
Install Plextor Applications Software.....	22
PlextorManager 2000	22
CD Res-Q*.....	22
Other Applications Software.....	23
4. Using Your PlexWriter	25
What Media to Use.....	25
Tray Loading and Operation	25
Handling CD Media	26
Cleaning Discs	26
Playing Audio CDs	27
Connections for Playing Audio CDs	27
Writing to CD-R and CD-RW Media.....	28
5. Maintenance and Troubleshooting	29
Upgrading Firmware	29

Troubleshooting	30
Troubleshooting: General	30
Troubleshooting: Read	32
Troubleshooting: Audio.....	34
Troubleshooting: Writing Discs	35
Troubleshooting for Macintosh Users	39
6. Frequently Asked Questions about Recording	41
Appendix A: PlexWriter Specifications.....	43
Appendix B: Technical Support	45
How to Contact Us.....	45
Before You E-mail/Log On/FAX/Call	46
Returns	46
Appendix C: Helpful Contacts.....	47
Contacts for CD-R and CD-RW Components	47
Contacts for PC Vendors.....	48
Index.....	49

1. Getting Started

This manual explains how to install and use your internal ATAPI PlexWriter 8/4/32 drive. For those of you with PCs, the installation process may seem a bit complicated (Mac people have it easy). Fear not. We have successfully walked through the installation process with millions of customers who previously had lived in mortal terror of the innards of their computer.

About this Manual

Please read this manual carefully and keep it handy for easy reference. Use the manual for installation, operation and troubleshooting. See your dealer or call Plextor's Technical Support Department should your drive require repair or service.

In this manual you should find all the information you need to successfully install, operate and troubleshoot your drive. If you run into a problem that doesn't seem to be covered, however, please contact us. (See "Appendix B: Technical Support" for the different ways you can contact us). You will be connected to our friendly, helpful band of tech support engineers who know their stuff. What might seem like an uncooperative drive to you could very well be a 30-second fix to them. But we will never know unless you contact us.

Meet Your PlexWriter 8/4/32

The PlexWriter 8/4/32 is a CD-ReWritable drive that provides professional quality CD performance for writing, rewriting and reading.

What the PlexWriter 8/4/32 Does

The PlexWriter 8/4/32 writes to CD-R (recordable CD) media at up to 8X speed or to CD-RW (rewritable CD) media at up to 4X speed. It reads all CD-ROM and CD-R media at a maximum of 32X speed with an average access time of 170 milliseconds. Maximum read speed of CD-RW media is 20X.

Reliable writing is virtually guaranteed, thanks to unique circuitry that automatically detects the type of media being recorded and adjusts the PlexWriter 8/4/32 to provide the optimum laser power and length of burn. The PlexWriter 8/4/32 has an IDE interface that supports the ATAPI-4 command set including special commands for CD-R.

The PlexWriter 8/4/32 is fully MMC-compliant, supporting writing features such as Disc-at-Once, Track-at-Once and Session-at-Once, as well as variable and fixed packet writing. It also supports the UDF file system implemented through packet writing.

The PlexWriter 8/4/32 supports running OPC and is compatible with Windows Plug & Play. Flash memory allows upgrading the PlexWriter 8/4/32 to the latest firmware revision (available from the Plextor web site) without opening the drive. Plextor backs up this remarkable drive with a one-year full warranty on parts and labor, and unlimited toll-free tech support.

What You Can Do with the PlexWriter 8/4/32

Just look at some of the things you can do with your PlexWriter 8/4/32:

- Record data or audio onto writable or rewritable CD media.
- Play music CDs.
- Save photos and other images on rewritable or writable CDs.
- Create a “CD sneakernet” to share information with colleagues—just use software such as Adaptec DirectCD to Drag & Drop files onto CD-R or CD-RW media, then continue adding files and sharing the same CD disc.
- Archive images and video to CD.
- Master new software programs on CD.
- Periodically back up your computer's hard disk, including operating system, hardware configuration, registry, program files and data. Plextor's CD Res-Q™* software makes this easy! You can even make a bootable CD. Information on CD Res-Q can also be found at <http://www.plextor.com/cdresq.htm>.

* CD Res-Q™ is available for purchase directly from Plextor.

To purchase CD Res-Q by phone, please call us at 408-980-1838 ext. 4 .

To purchase CD Res-Q by email, send your request to sales@plextor.com. Type: **CD RES-Q REQUEST** in the subject line. You will also need to include the serial number of your drive.

What's in the Box

What you find in your Plextor box depends on what the company that sold you the box put in—or took out—while the Plextor drive was in their possession.

Plextor currently sells its PlexWriter 8/4/32 drive in this configuration:

- PlexWriter 8/4/32 CD-RW drive
- 40-pin IDE ribbon cable
- 4 mounting screws
- 1 piece of approved CD-RW media
- 1 piece of approved CD-R media
- Plextor CD with bundled pre-mastering and packet writing software, including PlextorManager 2000
- PlexWriter 8/4/32 operation manual
- Warranty registration card
- PlextorManager 2000 manual

If the security sticker on top of your box is cut, there may be a good reason: for example, a dealer may have added other components or software. Carefully check the contents to ensure nothing has been removed. If something is missing, contact the party from whom you purchased the box for an explanation.

If your drive came pre-installed, some or all of the items above may have been installed and may not be separately available.

See Appendix C for locations to purchase additional or replacement accessories.

Save Your Box!

Be sure to save the box after you have installed your PlexWriter drive. The box and its packaging material were designed and drop tested to ensure your PlexWriter can endure rough treatment and still arrive in working order.

Please save the tray insert that was used to protect the delicate internal components during shipping. Should you need to ship the PlexWriter, it should be placed on the tray inside the drive.

We hope you will never have to ship your drive back to us. If you do, however, it's best to send it packaged in the original box. Some of our customers have not held on to their boxes and have had to resort to less-than-secure methods to get drives back to us.

We cannot assume liability for any damage your drive sustains during shipment. Therefore, please ship your drive in the safest manner possible.

Before shipping your drive, refer to the Plextor web site for pointers. The web site is at:

<http://www.plextor.com>

If you did not receive a box (for example, your drive came pre-installed in a computer), we recommend you pay a packaging store (such as Mail Boxes Etc.) to ship your drive. If you don't have a packaging store in your area, ask our Technical Support Department for packaging pointers when you call to get an RMA number before returning any drive.

PlexWriter Drive Features and Controls

Before proceeding, become familiar with the controls and features of your PlexWriter drive. Match the parts of your drive to the illustrations below.

Front Panel

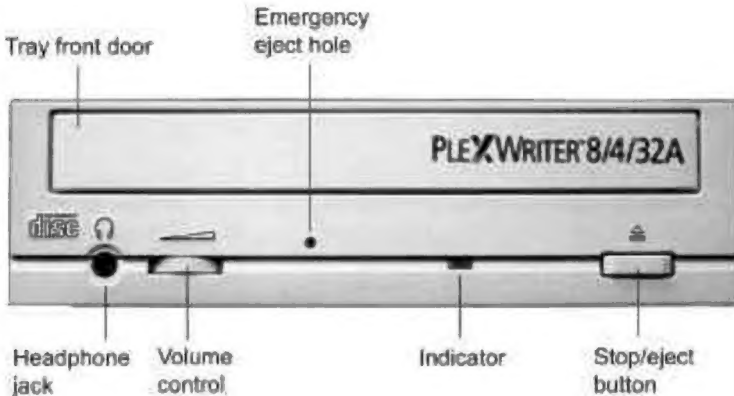


Figure 1: Front Panel of the PlexWriter 8/4/32 Drive

- **Tray front door:** Attached to tray drawer.
- **Headphone jack:** Stereo mini-jack for headphones and powered speakers.
- **Volume control:** Controls volume of headphone jack.
- **Disc indicator:** Illuminated during power up or when disc is inserted and being initialized. Blinks when reading or writing data from or to disc.
- **Stop/Eject button:** Push to eject or insert tray.
- **Emergency eject hole:** Insert emergency eject stick, paper clip, or other thin, rigid object to eject tray if automatic eject button does not work. Turn OFF power before using this feature.

Rear Panel

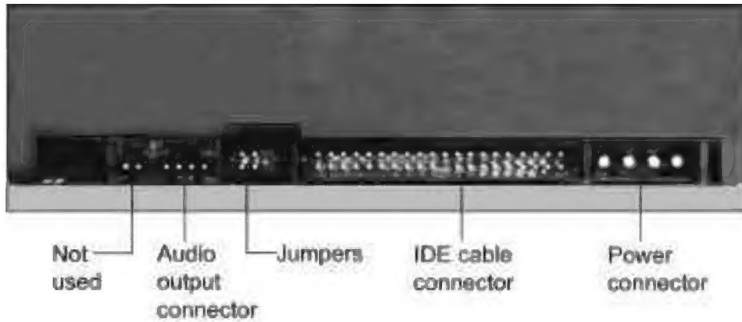


Figure 2: Rear Panel of the PlexWriter 8/4/32 Internal Drive

- **Audio output connector:** Outputs stereo analog signal. Use to connect to soundboard or audio amplifier. Use standard MPC-3 type, 4-pin connector.
- **Jumpers:** Use to select operation as an IDE master or slave, or for cable select. In general, leave these jumpers at their factory settings.
- **IDE interface connector:** Connects to IDE interface using 40-pin IDE flat ribbon cable.
- **Power connector:** Connects to your computer's power supply to provide DC +5V and +12V to the PlexWriter.

About Mastering Software

In order to create CD-R and CD-RW discs you will need to have mastering software installed on your computer system. You can check our web site (www.plextor.com) for an updated list of software that supports your drive. We provide mastering software kits in retail packaging for your convenience.

Precautions

Like the rest of your computer system, your PlexWriter requires reasonable care in its installation and use.

- Keep the area around your drive clean from dust, smoke, and other contaminants.
- Do not allow moisture or liquids, including water or cleaning fluids, to touch the drive. Thinner, benzene, or alcohol-based solvents can mar your drive's surface.
- Do not drop or jolt the drive.
- Do not attempt to open the drive and service it yourself. Removing the cover may expose you to harmful electrical voltages or the laser beam. For your safety, entrust service to Plextor-authorized service personnel only.
- Keep your CD discs free of dirt or other contaminants, by storing them in jewel cases. Use only industry-standard discs. Do not insert dirty, warped, poorly balanced, or cracked discs into the drive.
- Do not clean discs using a circular motion. Instead, use a radial motion: start at the center of the disc and proceed to the outer edge.

2. Installing Your PlexWriter

This chapter explains how to physically install your PlexWriter in your computer. The steps you'll need to do are as follows:

1. Turn OFF your computer system.
2. Set the jumpers for your new PlexWriter drive, if necessary.
3. Mount the PlexWriter drive into an available drive bay inside the computer system.
4. Make all necessary cabling connections: IDE cable, power cable, and audio cable.
5. Turn your computer system ON.

The following pages give more details for this procedure.

Open the Computer and Prepare for Installation

To determine whether your PlexWriter will be a master or a slave, open your computer and examine the IDE connections to the motherboard.

To open the computer:

1. Before proceeding, make sure the power to your computer and any external peripherals is OFF and your computer is UNPLUGGED from its power source.

QuickStart Installation—For Experienced PC Users Only

If you've installed computer peripherals before, you're in luck with the PlexWriter drive. Use this QuickStart installation to get up and running quickly.

Typical Scenario 1: You have a PC with an IDE interface installed, you have Windows 95/98 or NT, and you have nothing installed on the secondary IDE port.

What to do: Leave the PlexWriter's jumper set to Master, attach it to the secondary IDE port, and go. Windows will recognize the drive automatically.

Typical Scenario 2: You have a PC with an IDE interface installed, you have Windows 95/98 or NT, the primary IDE bus already has two devices connected and you have a CD-ROM installed on the secondary IDE port.

What to do: Change the CD-ROM to Slave, leave the PlexWriter's jumper set to Master and attach the PlexWriter to the secondary IDE port. Windows recognizes the new drive automatically.

If neither of these situations applies to you, or you're not comfortable with IDE installation, read the rest of this chapter for more detailed installation instructions.

2. Remove your computer's cover, following the directions provided by your computer's manufacturer. Typically, this involves loosening or removing several screws on the back panel of your computer and sliding off the cover.

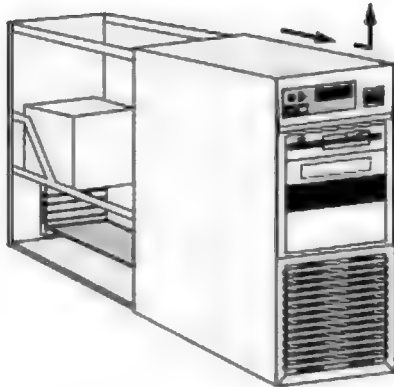


Figure 3: Removing a Typical Computer's Cover

Determine Your Existing IDE Configuration

With your computer open, determine the existing IDE configuration. You can do this by looking at the 40-pin IDE ribbon cable (or cables—there may be two) and seeing what is connected to them.

One end of the IDE cable is connected to a port on the computer's motherboard; and the other end is connected to one or two peripheral devices (such as a hard disk or CD-ROM drive). If there are two devices, one is considered the *master* and the other the *slave*. If there are two IDE ports, one is for the *primary* IDE bus and the other is for the *secondary* bus.

A typical computer's IDE configuration is usually one of the following:

- Hard disks connected as master and slave devices on primary IDE port; CD-ROM drive connected as master device on secondary IDE port.
- Hard disk connected as master device and CD-ROM drive connected as slave on the primary IDE port; nothing connected to secondary IDE port.
- Hard disk connected as master device on primary IDE port; nothing connected to secondary IDE port.

Set the Drive's Jumpers

You specify your drive's master or slave setting before installing it. You do this by changing the position of a jumper on the jumper block at the rear of the drive.

Your drive ships from our factory with its jumper set to operate the PlexWriter as a master. This will work in the most commonly found environments.

Changing the Jumper on Your Internal PlexWriter Drive

As shown in Figure 4, the PlexWriter drive arrives from the factory with its jumper set to MASTER. (A function is ON if the jumper is installed and OFF if the jumper is removed.)

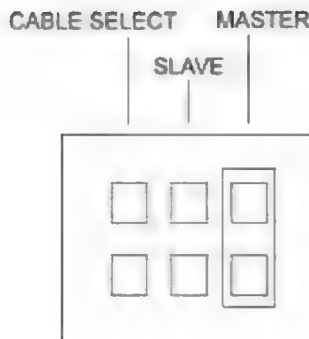


Figure 4: Factory Settings for Jumpers at the Rear of the Drive

Changing to a Master, Slave, or Cable Select

The Master/Slave setting for the drive is determined by the jumper. To change the drive from Master to Slave or to Cable Select, you must move the jumper.

For example, to change the PlexWriter drive to be a Slave, move the jumper to the middle set of pins, leaving the other pins uncovered. To change the drive for Cable Select, move the jumper to the left set of pins.

Changing Jumper Settings

To remove a jumper, pull it off with your fingers or a pair of needle-nose pliers.

To install a jumper, push it onto the jumper pins.

CAUTION: Ensure power to the drive is OFF before installing or removing jumpers.

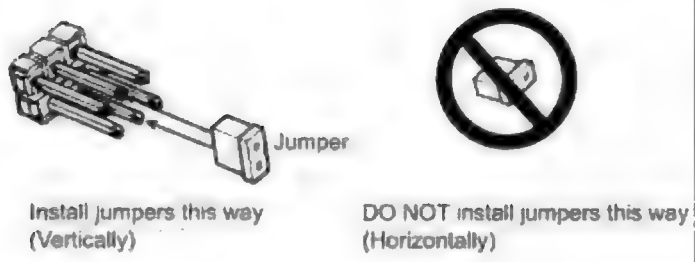


Figure 5: Install Jumpers Across Vertical Pairs of Pins

CAUTION: Install jumpers across each pin as shown (vertically). Do not connect one pin switch to another by installing the jumpers lengthwise (horizontally). Doing so could result in damage to the drive.

Select an IDE Configuration

Set the jumper according to the desired configuration, as shown in this table and the illustrations.

Before PlexWriter Installation		How to Install the PlexWriter	
A	Hard disks connected as master and slave devices on primary IDE port; CD-ROM connected as master device on secondary IDE port.	Connect the PlexWriter as master device to the secondary IDE port. Remove the CD-ROM drive, change it to slave, and connect it to the secondary IDE port.	
B	Hard disk connected as master device and CD-ROM drive connected as slave on the primary IDE port; nothing connected to secondary IDE port.	Connect the PlexWriter as master to secondary IDE port.	
C	Hard disk connected as master device on primary IDE port; nothing connected to secondary IDE port.	Connect the PlexWriter as master to secondary IDE port.	

NOTE: For best performance, try to connect the PlexWriter to the IDE port that is not connected to the hard disk drive or to a CD-ROM drive. In most cases, connect the PlexWriter to the secondary IDE port as a master.

NOTE: For best results, set the PlexWriter to be the master, if possible. DMA setting must be enabled on your system to achieve 8X writing speed.

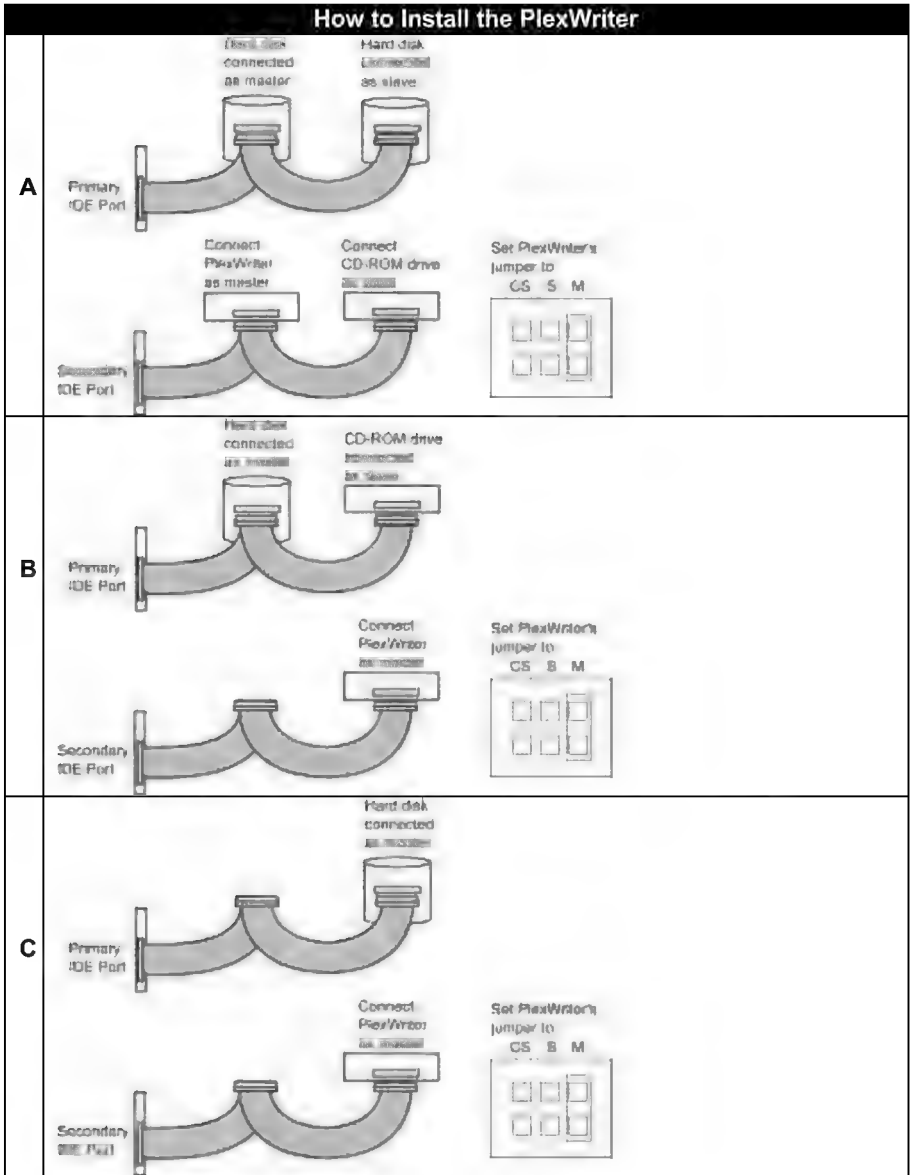


Figure 6: Typical IDE Configurations for Connecting the PlexWriter Drive

About Cable Select

The Cable Select jumper position sets the PlexWriter drive to use the CSEL signal from the IDE interface for configuration. This signal automatically selects the correct Master/Slave setting for the PlexWriter. To use CSEL, you must have:

- A computer that supports CSEL.
- A special CSEL IDE cable.

To use the host interface CSEL signal for configuration, set the PlexWriter's jumper to CABLE SELECT:

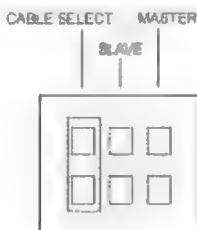


Figure 7: Using the CSEL Signal to Configure the PlexWriter Drive

Install the PlexWriter Drive

Before proceeding to install the PlexWriter drive in your personal computer, double-check your jumper setting.

Record the Serial Number

Record the serial number and TLA code of your drive on the inside front cover of this manual. If your drive came preinstalled, you can get this information using PlexorManager 2000. See the PlexorManager 2000 user's manual for instructions.

Mount the PlexWriter Drive in the Computer

You can mount your internal PlexWriter drive in any available bay. You must remove the small panel that covers the bay that you want to use.

CAUTION: Install your PlexWriter horizontally. Plextor does not guarantee the drive's performance in a vertical position.

If you don't have an empty bay, remove the existing IDE CD-ROM drive and install the PlexWriter.

You must make a minimum of two cable connections to your PlexWriter. The two cable connections that you must make are:

- IDE cable
- Power cable

A third cable connection will need to be made if you are using a soundboard in your computer and plan to connect the PlexWriter's audio output to the audio connector on the soundboard.

Do You Need Another IDE Ribbon Cable?

The IDE cable is a standard 40-pin flat-ribbon cable, usually with three connectors. One end connects to the IDE port on your computer's motherboard, and the other two connectors are free for attaching peripherals such as a hard disk or CD-ROM drive.

You may need to install another IDE ribbon cable in your computer. You can use the extra IDE cable supplied with your PlexWriter.

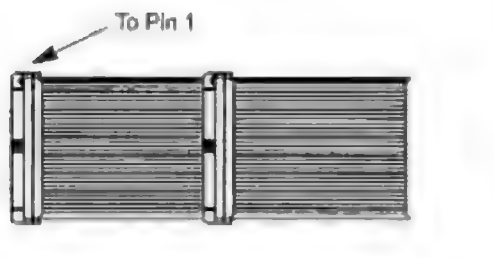


Figure 8: Internal IDE Ribbon Cable

CAUTION: Don't try to string too many IDE cables together. The length of any IDE cable cannot exceed 18 inches.

Do You Need a Power Cable?

In most computers, you will find free power connectors in the computer ready for your use. When you open the computer, check the cable running from your power supply to your hard disk and see if it has extra connectors on it. If so, you can plug one of these into the power connector found on the rear panel of the PlexWriter.

If you do not find any additional connectors (either because they were not supplied or they are all in use), you will have to buy a "splitter" or a "Y-connector." These can also be found at most retail and mail-order computer stores.

To mount the PlexWriter drive:

1. Make sure the power to your computer and any external peripherals are OFF and your computer is UNPLUGGED from its power source.
2. If you haven't already removed your computer's cover, remove it now, following the directions provided by your computer's manufacturer. Typically, this involves loosening or removing several screws on the back panel of your computer and sliding off the cover. See Figure 3 for details.

3. Remove the cover panel from the bay that will hold the PlexWriter drive. To remove the cover panel, pop it out by pressing outward lightly. (In some older computers, you may have to remove screws that hold the panel in place.)

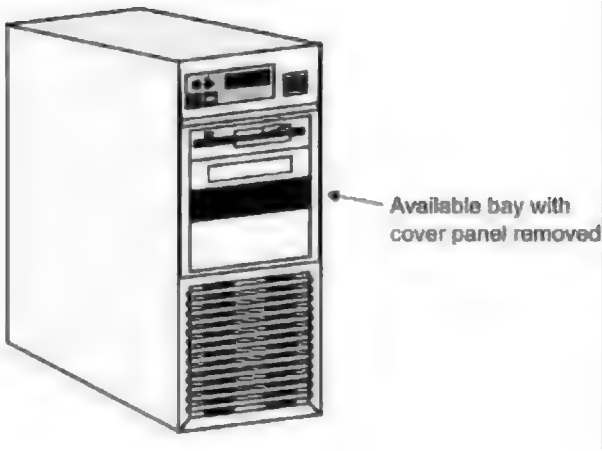


Figure 9: Removing the Cover Panel from a Bay

4. Determine if you must install mounting rails on the sides of your drive. To do so, insert the drive into the open bay. If the drive fits tightly with little or no clearance on either side of the drive, you will not have to use mounting rails. The drive can be mounted directly into your computer. Go to step 6.

NOTE: Plextor does not provide rails. If you need rails, you can obtain them from the computer manufacturer or from a computer supply retail or mail-order store.

5. If you must use mounting rails, fasten the rails to the lower pair of holes as shown in Figure 10. (In some instances, you may need to fasten the rails to the upper set of holes.) After fastening the rails, check their positioning by sliding the drive into the bay before you mount the drive or connect any cables.

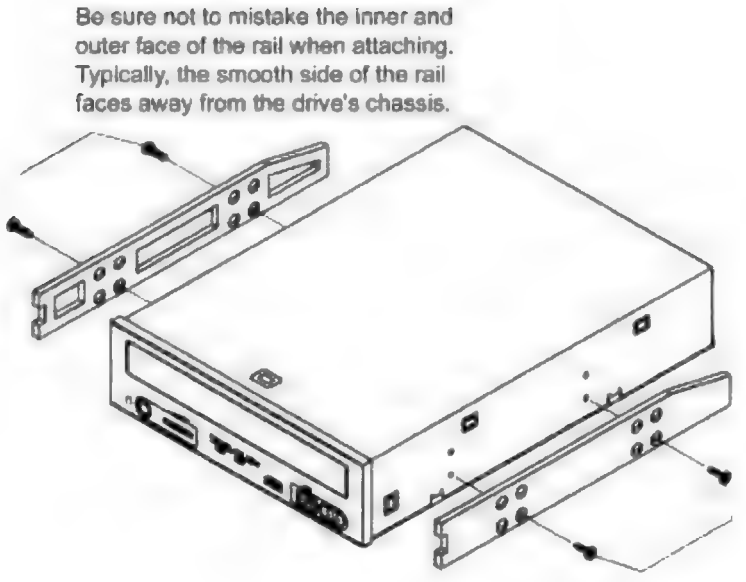


Figure 10: Installing Mounting Rails (if Needed)

6. Plug a free connector on the IDE cable into the IDE connector on the rear panel of the drive before you insert the drive into your computer. Then thread the cable through the front of the open bay and back toward the motherboard. The drive should slide smoothly into the bay. If it does not, check for obstructions in the bay and ensure the side rails are attached properly.
7. If not already connected, attach one end of the IDE ribbon cable to the connector on the motherboard.

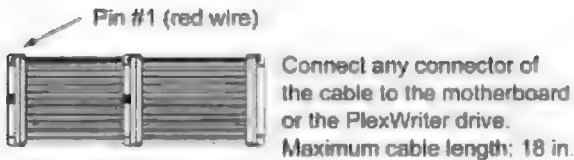


Figure 11: Connecting the IDE Ribbon Cable

CAUTION: It is easy to accidentally plug your IDE ribbon cable upside down into both your drive and the motherboard. Be sure you match the red stripe along one side of the IDE cable to Pin 1 on the motherboard and Pin 1 on the drive. (Pin 1 on the drive is closest to the power connector.) Each connector on the ribbon cable has a “key” in the middle. This key should fit into a slot in the middle of each connector of the motherboard, your PlexWriter, and any other internal IDE peripherals.

8. Double-check your work. You must ensure the side of the IDE cable with the red stripe is matched to Pin 1 on the interface board and on the drive.

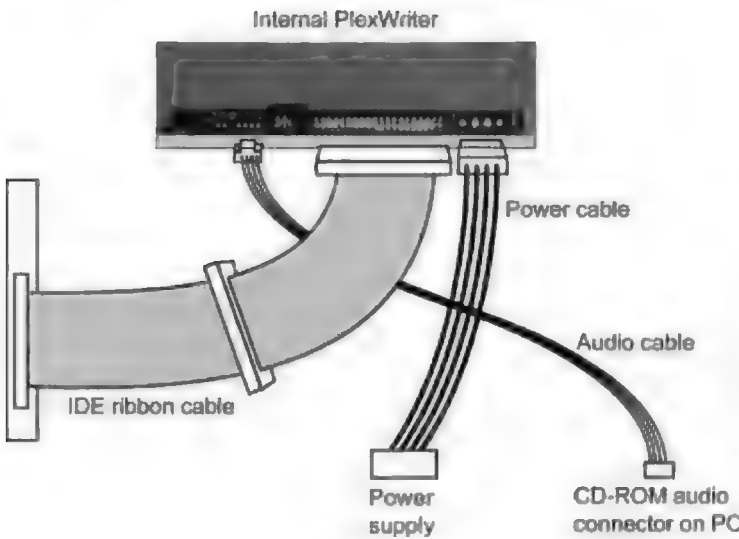


Figure 12: Power and IDE Connections for an Internal PlexWriter Drive

CAUTION: In the case of only one IDE device, you must make certain that one end of the cable is always connected to the IDE connector on the motherboard. The other end of the connector must be connected to a device. The end connector of the cable should never be left unconnected.

9. Connect a power cable from the computer to the DC INPUT connector of the PlexWriter drive. In most computers, you will find free power connectors that are ready for your use.

Check the cable running from your power supply to your hard disk and see if it has extra connectors on it. If so, you can plug one of these into the power connector found on the rear panel of the PlexWriter.

10. Connect the audio cable if you want to use a soundboard in your system. This cable runs from the four-pin audio output connector on the rear panel of your PlexWriter drive to your soundboard. See “Using Soundboards and Audio Cables” on page 17 for more information about audio cables.

11. Mount the PlexWriter drive in the computer using the four screws were supplied with your drive. Use only these screws.

CAUTION: Do not mount your drive in your computer using screws other than those supplied by Plextor. You may damage the drive if you insert screws that are too long.

Using Soundboards and Audio Cables

Whichever category your soundboard falls into, you will find that the best source of information about installing the soundboard in your computer is the board's manual. Once you have successfully installed the soundboard in your computer, you can continue below for a description of the different cable connections that need to be made.

Choosing and Connecting Audio Cables

To make audio connections to your PlexWriter, you may have to purchase an audio cable from a computer supply store.

Audio Connection	Cable Required	How to Connect It
MPC audio source	MPC-compliant audio cable	Connect to MPC audio source, and to audio output connector at the rear of the PlexWriter.
Sound Blaster or compatible soundboard	Sound Blaster-compatible audio cable	Connect to Sound Blaster-compatible audio board and to audio output connector at the rear of the PlexWriter

We can help by recommending several vendors who offer audio cables; see page 47 of this manual.

Make Sure the Drive Is Recognized

After installation, make sure the PlexWriter drive and other IDE peripherals are recognized by your computer. To check whether they are recognized:

On a PC with Windows 95 or 98:

1. Turn the computer ON. After the computer boots up, you should see the Windows display.
2. Open Windows Explorer and ensure there is an icon for the PlexWriter, the hard disk, and other CD-ROM drives, if present. The PlexWriter may be D: or E: or another designator.
3. If the PlexWriter drive is not recognized in Windows, reboot the computer and use your computer's setup program to program the BIOS to recognize it.

NOTE: Refer to the computer's documentation for information on how to run the motherboard BIOS setup program.

4. Use the setup program to set up IDE Master and Slave designations as needed for your configuration, on the primary or secondary IDE bus. If the IDE interface is disabled on your computer, you will need to enable it. If a master or slave device is set to "disable" or "none" or a similar designation, change it as appropriate to "enable" or "auto" (or something similar, depending on your setup program).
5. Save and exit your CMOS setup to restart your computer with the new settings.
6. In Windows, click the Start button, then Settings, then Control Panel, then double-click on System icon, then click on Device Manager tab. Click + sign next to the CD-ROM icon and look at the PX-W8432T drive underneath the CD-ROM icon.
7. If you do not see the PX-W8432T drive icon, or if it has a yellow diamond with an explanation point (!), contact your PC or motherboard manufacturer to get the appropriate IDE controller driver.

On a PC with Windows NT:

1. Turn the computer ON. After the computer boots up, you should see the Windows display.
2. Open Windows Explorer and ensure there is an icon for the PlexWriter, the hard disk, and other CD-ROM drives, if present. The PlexWriter may be D: or E: or another designator.
3. If the PlexWriter drive is not recognized in Windows NT, reboot the computer and use your computer's setup program to program the BIOS to recognize it. Reboot the computer when you are finished.

NOTE: Refer to the computer's documentation for information on how to run the setup program.

4. Use the setup program to set up IDE master and slave designations as needed for your configuration on the primary or secondary bus. If a master or slave is set to "disable" or "none" (or a similar designation, change it as appropriate to "enable" or "auto" (or something similar, depending on your setup program).
5. Save and exit your CMOS setup to restart your computer with the new settings.

Enable DMA

To achieve top speeds for reading and writing with your PlexWriter drive, direct memory access (DMA) must be enabled for the drive. To ensure that DMA is enabled:

1. In Windows 95 or 98, click the Start button, then Settings, then Control Panel, then double-click on System icon, then click on Device Manager tab. You see a list of devices in your system.
2. Double-click the CD-ROM icon and choose the PX-W8432T drive by clicking on it once. Then, click on the Properties button and select the Settings tab. You see the drive properties for the PlexWriter.
3. Ensure the DMA box is checked ON, as well as all other check boxes in this window.
4. Click on OK button and then click on the Close button to exit System Properties window.
5. When prompted if you want to restart you computer now, select yes for this change to be enabled and saved.

This page intentionally left blank.

3. Installing and Using Software

There's one more step before you can begin to use your PlexWriter drive: you need to install special software on your computer. There are two software types:

- **Device driver:** Software program that allows your computer to interact with the PlexWriter drive. Drivers are included in Windows 95/98 and NT that let you operate your PlexWriter as a CD-ROM device (reader). The device driver is installed automatically by the operating system as long as the IDE interface is enabled in your system's motherboard BIOS.
- **Application software:** Software programs for specific tasks, such as mastering CDs, backing up your hard disk or files, capturing audio, duplicating CDs, and more. Some of these applications are supplied with your PlexWriter if purchased as a kit from Plextor, while others are available from other vendors.

If you have any problems at all, our technical support staff will help you.

Install Device Drivers

Your PlexWriter acts as a "CD-ROM Drive" for purposes of installation and setup. In some cases, you will need to install additional software to make use of all of the features of the PlexWriter.

- **Using the PlexWriter on a PC:**
 - **As CD-ROM:** The computer's operating system, whether it is Windows 95, Windows 98, or Windows NT, supplies a generic CD-ROM device driver that allows the PlexWriter to function as a standard CD-ROM drive. You don't need to install anything else.
 - **As a CD-R or CD-RW device:** In order to write to CD-R or CD-RW media, you will need additional software. If you purchased a kit from Plextor, software is supplied.
- **Using the PlexWriter on a Macintosh:** Whether using the PlexWriter as a standard CD-ROM or as a CD-R or CD-RW device, you will need additional drivers or software besides those that are part of the Macintosh operating system. You will need to purchase this software separately. The compatibility list is available from Plextor's web site at www.plextor.com.

Before installing any software, check that all the cable connections between your PlexWriter and computer are correct, that the jumper is set properly, and the PlexWriter is recognized by your system.

Install Plextor Applications Software

Windows 95, 98, and NT can immediately operate your PlexWriter drive as a CD-ROM device (reader) and permit the drive to be recognized by the computer's operating system. In order to take advantage of the PlexWriter's ability to *record* on CD-R or CD-RW media, however, you will also need packet writing and mastering applications software on your PC. You can also check the compatibility list on the Plextor web site at www.plextor.com, for software that supports the PlexWriter under other operating systems. You will need to purchase this software separately.

If you purchased your PlexWriter as part of a Plextor kit, much of the software you need is included for use on a PC. Plextor has developed several utilities to help you get the most from your PlexWriter drive.

PlextorManager 2000

This unique suite of audio management and drive control applications puts you in the CD "driver's" seat. A variety of distinctive modules allow you to listen to, record and even create your own playlists using a standard and digital audio file formats. Rip the finest quality audio using digital audio extraction at high speed. Need to make a duplicate CD? A simple mouse click and you're done. Control every aspect of the drive from spinup and spindown timeout to eject lock. PlextorManager 2000 also gives you information on the drive's configuration and the media inserted into it.

See the *Plextor Manager User's Manual* for details.

CD Res-Q*

For backup and disaster recovery, CD Res-Q lets you create an image of your hard drive on secure, reliable CD-R media. By spanning CDs, you can back up your entire HDD. Additional features include making a CD bootable, choice of compression, HDD or image file integrity verification, and more.

NOTE: CD Res-Q backup works only with Plextor CD-R and CD-RW drives. You can restore from any drive.

* CD Res-Q™ is available for purchase directly from Plextor.

To purchase CD Res-Q by phone, please call us at 408-980-1838 ext. 4 .

To purchase CD Res-Q by email, send your request to sales@plextor.com. Type: **CD RES-Q REQUEST** in the subject line. You will also need to include the serial number of your drive.

Other Applications Software

Other valuable applications software—which may already be included if you purchased a kit from Plextor—lets you use your PlexWriter drive in exciting new ways.

- **Packet writing software:** This type of application lets you use your PlexWriter as an enormous floppy drive. You can just Drag & Drop files straight to a CD-R or CD-RW disc.
- **Mastering software:** In conjunction with your PlexWriter drive, mastering software lets you create specific format discs, such as audio, data, mixed mode, etc...

This page intentionally left blank.

4. Using Your PlexWriter

This chapter explains how to use your PlexWriter drive and how to load, handle and care for your CDs.

What Media to Use

Use the right media! Your PlexWriter drive's capabilities change depending on which type of compact disc you use. It currently supports these types:

- **CD-ROM:** You can immediately play or read prerecorded discs, such as audio CDs and data discs.
- **CD-R:** Recordable CD. You can record on these discs, but only once. You can also read them.
- **CD-RW:** ReWritable CD. These discs support recording and re-recording (up to 1,000 times). You can also read them.

NOTE: Firmware upgrades for your PlexWriter drive are available as downloads from the Plextor web site. Please check the web site at www.plextor.com.

Tray Loading and Operation

To load and unload the tray:

1. While the PlexWriter drive is powered up, push the Stop/Eject button on the front panel. The tray drawer slides out in 3–4 seconds.
2. If this is the first time the drive is used, remove the tray insert.
3. Lay a blank CD in the depression in the tray, label side up. The CD should lie flat in the tray.

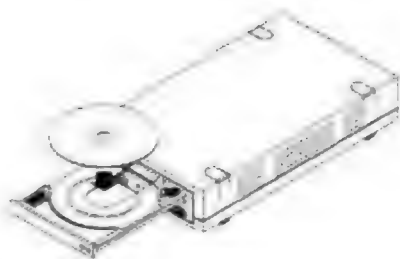


Figure 13: Loading the Tray

4. Press the Stop/Eject button again and the tray will slide shut within seconds.

NOTE: Always use the Stop/Eject button to close the tray in a smooth and secure manner. Closing the tray by pressing the front of the drawer by hand is not recommended and risks damage or premature wearing of the mechanism.

Handling CD Media

Take care when handling blank CD-R and CD-RW media. Dust, scratches, and fingerprints on the data side of the disc can cause write errors during recording. When picking up or holding blank media you can either place your fingers along the outer edge of the disc, or place one finger through the center hole and one finger on the outer edge. Once you have finished creating a disc, label it by writing on the top using permanent ink.

NOTE: We do not recommend placing self-sticking CD-R labels on the disc. The weight of the label may unbalance the disc and cause write errors during recording or read errors during reading.

Cleaning Discs

For proper read and write performance, your CD-R, CD-RW, and CD-ROM discs must be clean. Trying to record on a dirty disc may result in a failed session and ruin the disc.

To clean the disc, wipe the disc using a clean, soft cotton cloth to remove surface dirt such as fingerprints. Use a straight-line motion, wiping from the center out. Do not wipe the disc in a circular motion.

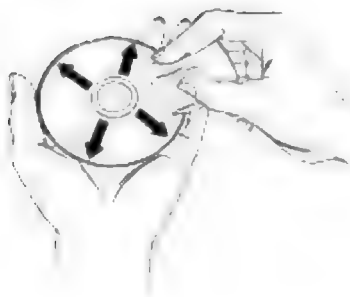


Figure 14: Wipe the Disc from the Center Outward

HINT: Keep your frequently used discs in jewel cases at all times to prevent them from becoming dirty or damaged.

Playing Audio CDs

Connections for Playing Audio CDs

There are basically two types of audio:

- ❑ **CD-Audio:** This comes from audio discs (like the ones used by your home stereo) that are translated directly by your PlexWriter into sound. You do not need a soundboard to hear this audio. Simply plug in a set of headphones or powered speakers into the headphone jack on the front of your drive.
- ❑ **Soundboard audio:** This comes from data files, such as a WAV or MP3, that are transferred from the CD via the IDE host adapter to your computer. The soundboard translates the data into sound. If you do not have a soundboard, you will not be able to hear this form of audio from your PlexWriter.

In order to listen to an audio CD, connect an audio cable to the analog audio connector on the rear of the drive and connect the other end to your soundboard.

Please refer to “Using Soundboards and Audio Cables” on page 17 of this manual for more detail.

You can also listen to an audio CD by plugging in a pair of stereo headphones or self-powered speakers into the headphone jack on the drive’s front panel, as shown in Figure 15. In order to control audio playback, you will need to use audio control software such as Windows Media Player or CD Player.



Figure 15: Connections for Playing Audio Using the Headphone Jack

NOTE: The volume control on the front panel of your drive adjusts only the sound level of the headphone jack. It has no impact on the volume level of the rear panel audio outputs. PlexorManager software can control volume level of the signal from the rear panel audio outputs.

Playing a CD Using PlextorManager

For PC users, unique and powerful audio software - PlextorManager 2000 - is provided. For installation and operating instructions, refer to the separate *PlextorManager 2000 User's Manual* and README files.

Playing a CD Using Other Utilities

Other alternatives for playing CDs include audio utilities designed into your operating system (Media Player or CD Player in Windows, for instance) or various other utilities that can be purchased commercially.

To listen to music through the computer's soundboard, volume can be controlled through the volume control on your task bar (via a soundboard). You can also mute the sound on your soundboard and listen to music through headphones or self-powered speakers. When using headphones or self-powered speakers, volume is controlled by the volume knob on the front panel of the drive.

Playing a CD On a Macintosh

Mac users can run a program such as CDT Remote (which is typically included with FWB's CD-ROM device driver).

Writing to CD-R and CD-RW Media

In conjunction with your PlexWriter drive, mastering and packet writing software such as EasyCD Creator and DirectCD allow you to write audio, video, data, or other information to writable (CD-R) or rewritable (CD-RW) media.

IMPORTANT: Only newer CD-ROM drives can read CD-RW discs. Drives manufactured before 1997 cannot read them. Plextor CD-ROM drives starting with the 12/20PleX or newer can read CD-RW discs.

5. Maintenance and Troubleshooting

This chapter explains maintenance and troubleshooting procedures for your PlexWriter drive.

With proper maintenance, you can prevent problems. If problems arise, you can often solve many simple problems on your own, rather than wait for assistance from a Plextor representative.

TIP: Read all of this section that pertain to you (PC or Macintosh). Many of the problems discussed happen only rarely, and others may seem as if they do not pertain to you. However, if you are familiar with the variety of problems that can occur, you will be better prepared to deal with them if they do occur.

Upgrading Firmware

Plextor creates firmware revisions to meet the peculiar needs of large computer manufacturers. It is rare that these will impact the performance or operation of your PlexWriter drive. However, we advise that our customers always update drives with latest available firmware. Before troubleshooting a possible problem with your drive please make sure to visit our web site at www.plextor.com to check if you have the latest firmware.

To obtain new firmware for your PlexWriter drive:

1. Go to the Plextor web site at www.plextor.com.
2. Look for firmware upgrades in either the Technical Support area or on the Downloads page. There is a description of the latest firmware revision and its intended use.
3. Download the firmware to your computer.

To upgrade firmware:

1. Run the executable file that you downloaded from Plextor's web site.
2. Accept all defaults by continuing to click on the "Next" button until you see the message:
Firmware update has completed.
3. Reboot your system.
4. Verify DMA is enabled before using the PlexWriter

Note: If firmware upgrade does not complete successfully, you may need to disable DMA and this procedure again.

To enable/disable DMA:

1. Click the Start button, then Settings, then Control Panel, then double-click on System icon, then select the Device Manager tab. You see a list of devices in your system.

2. Double-click the CD-ROM icon and choose the PX-W8432T by clicking on it once. Then, click on the Properties button and select the Settings tab. You now see the drive properties for the PlexWriter.
3. Enable DMA by click the DMA checkbox ON, then click OK.
Disable DMA by click the DMA checkbox OFF, then click OK.
4. Close the System Properties window by clicking on the Close button.
5. When prompted, Reboot your system.

Note: DMA must be enabled for normal operation of the PlexWriter.

Troubleshooting

If you have problems during or right after installation of your PlexWriter drive, use these tips to help find the problem. You can also use these charts to help find problems that develop in existing installations.

Start here if you're a PC user. Mac users should start with page 39 and come back here if they don't find the answer.

Troubleshooting: General

Symptoms

PlexWriter drive not recognized by computer.

Possible Cause #1

- IDE cable is not connected properly.

Solution #1

- Ensure IDE cable is connected.
- Verify that connectors on motherboard and drive do not have bent pins.

Possible Cause #2

- Drive or IDE bus is not enabled in the computer's BIOS.

Solution #2

- Ensure the IDE port is enabled and set properly in motherboard's BIOS.
See "Make Sure the Drive Is Recognized" on page 17 for more details.

Possible Cause #3

- Jumper conflict.

Solution #3

- Check jumpers for the PlexWriter drive and the other peripheral devices (hard disk or CD-ROM drive) on the same IDE cable. Ensure the jumper for one device is set to master and the other to slave. Two devices on one cable cannot be set to the same setting.

Possible Cause #4

- Wrong cable with jumper set to Cable Select.

Solution #4

- Make sure that a CSEL-compatible IDE cable is used if you want to use the PlexWriter with jumper set to Cable Select.

Possible Cause #5

- Power connector is not attached to PlexWriter or does not work.

Solution #5

- Ensure the computer's power cable is securely attached to the PlexWriter's power connector.
- When the computer's power is ON, confirm that the PlexWriter's indicator LED is illuminated briefly, then is extinguished.
- Connect a different power cable to PlexWriter.

Symptoms

PlexWriter does not respond (lights or eject button).

Possible Cause #1

- No power.

Solution #1

- Ensure the power cable is connected securely to the PlexWriter's power connector.
- Try a different power cable.

Possible Cause #2

- IDE cable isn't connected properly.

Solution #2

- Ensure that the IDE cable is securely inserted, and is not damaged.
- Check the connector pins to ensure they are not bent.

Symptoms

Cannot eject tray.

Possible Cause #1

- Tray is locked by PlextorManager software.

Solution #1

- Refer to PlextorManager manual how to unlock the eject feature.

Possible Cause #2

- CD was not properly set into tray and is stuck.

Solution #2

- At the PlexWriter's front panel, insert a thin object such as a paper clip into the emergency eject hole and eject the tray.

Troubleshooting: Read

Symptoms

PlexWriter drive has read errors, may not respond to a DIR command or cannot run a program.

Possible Cause #1

- Defective CD-ROM, CD-R, or CD-RW disc.
- A fingerprint, contaminants, or scratches on the disc's surface may prevent the drive from reading or writing data.

Solution #1

- Clean the disc as detailed on page 26.
- Try a different disc.

Possible Cause #2

- Disc is badly manufactured.

Solution #2

- Try a different disc.

Possible Cause #3

- Bad connection between the PlexWriter drive and the motherboard.

Solution #3

- Inspect the IDE cable and drive for recessed, broken, or bent pins.
- Inspect the IDE ribbon cable for any signs of distress, such as kinking.

Possible Cause #4

- CD-Audio disc in the drive. Audio CDs do not have computer data, so typing computer commands in DOS while an audio disc is in your drive gives an error message.

Solution #4

- Use a data CD in the PlexWriter drive.

Possible Cause #5

- Disc is inserted upside down.

Solution #5

- Eject the disc and load it with the label or text side up.

Possible Cause #6

- Blank CD-R or CD-RW disc is inside the drive.

Solution #6

- Remove the disc from the drive and test it by using another disc

Symptoms

Cannot use other CD-ROM drives to initialize or discs written by PlexWriter.

Possible Cause #1

- Trying to read a CD-RW disc in a CD-ROM drive that does not support it.

Solution #1

- Use the PlexWriter to read CD-RW discs or use a different CD-ROM drive. Only CD-ROM drives manufactured after 1997 can read CD-RW discs.

Possible Cause #2

- UDF reader is not installed on the system to read CD-RW or packet written discs from a CD-ROM drive.

Solution #2

- Refer to your packet writing software manual for how to obtain a UDF reader and install it on the computer where you need to access these discs.

Possible Cause #3

- Session was left open on a CD-R disc and does not have a Table of Contents.

Solution #3

- Place this disc back into PlexWriter and use the same software originally used to write to it. Then close the session/disc.

Symptoms

Excessive noise.

Excessive vibration.

Slow read performance.

Possible Cause

- CD is poorly balanced. Poorly manufactured discs or discs with poorly distributed ink on labeling cause significant vibration at high speeds because they are out of balance. Read errors may also occur.
- If the disc label (especially adhesive labels) adds more weight to one area of the disc than another it can also cause the disc to be out of balance.

Solution

- Remove any adhesive label.
- Clean the disc as detailed on page 26.
- In Windows 95, 98 and NT use PlextorManager to lower the drive speed.
- If there is no foreign substance on the disc, contact the disc manufacturer for a replacement.

Symptoms

Can read only the last session of a multisession CD-R or CD-RW disc.

Possible Cause

- “Import previous session” or a similar feature was not enabled when the multisession disc was created.

Solution

- Use CD-R or CD-RW mastering software to import session(s). Such features may vary in name depending on the software being used. Please refer to the appropriate manual regarding this feature.

Troubleshooting: Audio

Symptoms

When playing an audio CD, you do not hear sound even though everything appears to be functioning normally.

Possible Causes

- Soundboard volume too low.
- Mixer settings for soundboard set too low.
- Need soundboard.
- Need audio cable connection.
- Soundboard not properly configured.

Solution

- Each soundboard has a different setting for each input source, including one for CD-Audio. Run your soundboard’s mixer program and verify that the volume is turned up or not muted. You can do this by double-clicking on the speaker icon on your computer’s task bar.
- Check your system configuration to see if the soundboard settings (such as IRQ, memory, etc.) are conflicting with other devices on the system.
- Check if all the necessary drivers and multimedia devices required by your soundboard are installed.
- Make sure the audio cable is properly connected between PlexWriter and soundboard.

Symptoms

Low sound level from PlexWriter drive.

Possible Cause #1

- Improper audio cable connection between PlexWriter drive and soundboard.

Solution #1

- Check the cable connection from PlexWriter to soundboard.

Possible Cause #2

- Low levels from audio mixer.

Solution #2

- Check the master, CD and line levels of all audio mixers.

Troubleshooting: Writing Discs**Symptoms**

Cannot write to CD-R or CD-RW disc.

Possible Cause #1

- You are using authoring software other than that bundled with your PlexWriter.

Solution #1

- Use the authoring software provided with the PlexWriter.
- To use other types of authoring software, contact the supplier and ensure the software support the PX-W8432T CD-RW drive. Supported software lists can also be found on the Plextor web site at www.plextor.com.

Possible Cause #2

- CD-R or CD-RW media is not supported.

Solution #2

- Use CD-R or CD-RW media recommended by Plextor. Supported media lists can also be found on the Plextor web site at www.plextor.com.

Possible Cause #3

- Disc inserted upside down.

Solution #3

- Eject the disc from tray and load it with the label side up.

Possible Cause #4

- Lack of hard disk capacity.

This varies with different software packages. Contact the software vendor or check their documentation for recommendations.

Solution #4

- Delete files from your hard disk to free up sufficient space; or use another hard disk.

Symptoms

CD-R or CD-RW software cannot detect PlexWriter

Possible Cause #1

- Power connector is not attached to PlexWriter.

Solution #1

- Ensure the computer's power cable is securely attached to the PlexWriter's power connector.

- When the computer's power is turned ON, confirm that the PlexWriter's indicator LED is illuminated briefly, then is extinguished.
- Try connecting another power cable to the PlexWriter.

Possible Cause #2

- IDE cable isn't connected properly.

Solution #2

- Ensure that the IDE cable is securely inserted, and is not damaged. Check the connector pins to ensure they are not bent.

Possible Cause #3

- Drive or IDE bus is not enabled in the computer's BIOS.

Solution #3

- Ensure the IDE port is enabled and set properly in motherboard's BIOS. See "Make Sure the Drive Is Recognized" on page 17 for more details.

Possible Cause #4

- Jumper conflict.

Solution #4

- Check jumpers for the PlexWriter drive and the other peripheral devices (hard disk or CD-ROM drive) on the same IDE cable. Ensure the jumper for one device is set to Master and the other to Slave. Two devices on one cable cannot be set to the same setting.

Possible Cause #5

- Wrong cable with jumper set to Cable Select.

Solution #5

- Make sure that a CSEL-compatible IDE cable is used if you want to use the PlexWriter with jumper set to Cable Select.

Symptoms

Writing error occurs.

Buffer underrun.

Does not record at 8X.

Possible Cause #1

- DMA is not enabled on your computer.

Solution #1

- In Windows 95 and 98, click on Start button, then select Settings/Control Panel, then double-click on System icon, then click on Device Manager tab, then double-click on CD-ROM icon. Select PlexWriter and click on Properties. Then click on the Settings tab and enable DMA. Reboot your system.
- Make sure DMA is enabled on your motherboard.

Possible Causes #2

- Network is being used.
- Mouse was moved or Windows screensaver activated while writing.
- Other applications are running.
- Power save mode is active.

Solution #2

- If problems occur when writing, reduce the load on CPU resources. Some ways to do this are:
 - ☐ Log off from the network.
 - ☐ Don't use the mouse.
 - ☐ Disable the screensaver or power save mode.
 - ☐ Exit all other applications.

Possible Cause #3

- Shortage of PC memory. If there is insufficient main memory in the PC, data may be swapped to the hard disk, and this can cause a buffer underrun.

Solution #3

- Increase the PC's main memory capacity.

Possible Cause #4

- PlexWriter and other IDE CD-ROM drive are connected on the same cable.

Solution #4

- When writing from another IDE device to the PlexWriter on the same bus using on-the-fly writing, the IDE bus is very busy and it may cause writing errors. This depends on your system speed and configuration. Use the image writing method for best results (safe mode) or record at lower speed.
- Put the IDE CD-ROM drive on the primary bus and PlexWriter as the only device on the secondary bus (Master).

Possible Cause #5

- PlexWriter and hard disk are connected on the same cable.

Solution #5

- Remove the PlexWriter from the cable and re-connect it to a secondary IDE port.

Possible Cause #6

- Automatic thermal recalibration triggered.
(Some high-speed hard disks are equipped with an automatic thermal re-calibration function.)

Solution #6

- Use another hard disk in this case.

Possible Cause #7

- Defective CD-R or CD-RW media. CD-R or CD-RW media may be dirty, scratched, or damaged.

Solution #7

- ReWrite using another CD-R or CD-RW disc.

Symptom

Cannot add information to CD-R or CD-RW disc.

Possible Cause #1

- The CD-R or CD-RW disc was originally written using other software. If the software is different, incompatibility errors may occur.

Solution #1

- Always use the same authoring software to add content to a disc.

Possible Cause #2

- Not enough disc capacity.
Capacity of a standard 74-minute CD is limited to 650 MB.

Solution #2

- Use different CD-R or CD-RW media if the capacity is insufficient.

Possible Cause #3

- The disc is written with on a CD-R or CD-RW drive from another vendor.

Solution #3

- Use a different CD-R or CD-RW disc.
- Try to use same drive to add more data to CD-R or CD-RW disc.

Symptoms

Cannot write at 8X speed.

Possible Cause #1

- Using poor quality media.

Solution #1

- Use the CD-R/RW media recommended by Plextor. Supported media lists can also be found on the Plextor web site at www.plextor.com.

Possible Cause #2

- Buffer underrun occurring.

Solution #2

- Reduce the load on CPU resources. Some ways to do this are:
 - ☐ Log off from the network.
 - ☐ Don't use the mouse.
 - ☐ Disable the screen saver or power save mode.
 - ☐ Quit all other applications except the authoring software.

Possible Cause #3

- Using CD-RW media. This drive does not support 8X speed with CD-RW media.

Solution #3

- Use CD-R media.

Possible Cause #4

- Defective CD-R media.

Solution #4

- CD-R media may be dirty, scratched or damaged. Rewrite using another CD-R disc.

Possible Cause #5

- Using authoring software other than that bundled with the PlexWriter.

Solution #5

- To use other types of authoring software, contact the supplier and ensure the software support the PX-W8432T CD-RW drive. Supported software lists can also be found on the Plextor web site at www.plextor.com.

Possible Cause #6

- CD-ROM drive used cannot read data fast enough to record at 8X.

Solution #6

- Record to HDD first, then to PlexWriter.

Troubleshooting for Macintosh Users**Symptoms**

Drive will not operate as CD-ROM, CD-R or CD-RW device.

Possible Cause

- Whether using the PlexWriter as a standard CD-ROM, CD-R or CD-RW device, you will need additional software and device drivers that are not part of the Macintosh operating system.

Solution

- You will need to purchase additional software. Supported software lists can also be found on the Plextor web site at www.plextor.com.

Symptoms

Drive not responding.

Possible Cause

- Bad connection between PlexWriter drive and IDE interface.

Solution

- Check the IDE cable to ensure it is seated properly and has no bent pins.

This page intentionally left blank.

6. Frequently Asked Questions about Recording

What media should I use for my PlexWriter?

Supported media lists can also be found on the Plextor web site at www.plextor.com.

When can I use CD-RW media?

CD-RW media can only be used for writing in ReWritable drives. It is readable only in ReWritable drives or newer MultiRead CD-ROMs with UDF readers installed. UDF readers are available from software companies that develop packet writing software. With CD-RW media you can:

- ☐ Use as if it were a large capacity floppy disc.
- ☐ Transport files to and from work.
- ☐ Copy your important data periodically.
- ☐ Store large projects as you develop them.

When should I use CD-R media?

CD-R media can be read in most CD-ROM, CD-Recordable or CD-ReWritable drives. Use CD-R media to:

- ☐ Permanently archive important data.
- ☐ Copy your music to CD for personal use.
- ☐ Create specific format discs.
- ☐ Create disc for distribution to others.
- ☐ Share non-editable presentations

Why doesn't CD-Copier work?

Some possible reasons are:

- ☐ Some CD-ROM drives are not fast enough for direct copying to the PlexWriter. They cannot stream data fast enough to record at 8X or are not capable of digital audio extraction at high speed.
- ☐ The CD-R disc being used is poor quality, scratched, badly manufactured, or has oily fingerprints.
- ☐ Some CDs have copy prevention or other feature that does not allow direct CD-to-CD duplication.
- ☐ Software may not support that disc format.

Why am I getting buffer underrun errors?

Recording CDs requires a source device to provide an uninterrupted stream of data. A buffer underrun occurs when the data stream is interrupted. This can occur if:

- ☐ Another application interrupts the writing process.
- ☐ The write speed is set higher than the source drive can supply data.
- ☐ Lack of computer memory.
- ☐ Poor quality discs, scratched discs, discs with fingerprints, or badly manufactured discs.

This page intentionally left blank.

Appendix A: PlexWriter Specifications

Disc Specifications

Useable Formats: Read	CD-DA; CD-ROM (Mode 1); CD-ROM XA (Mode 2: form 1 or form 2); CD-ROM (Mixed Mode); Photo CD; VideoCD; CD-I (MPEG movies); CD-Extra; CD-G; CD Text
Useable Formats: Write	ISO 9660-HFS; Rockridge; Photo CD, VideoCD; CD-I; CD-Extra (CD-Plus); Enhanced CD; CD-R; CD+G; CD Text; CD-Midi
Disc Diameter	12 cm diameter (Recording time 74 min.)
Writing Modes	Track-at-Once, Disc-at-Once, Session-at-Once, multisession, fixed and variable packet writing
Recommended Media	
▪ CD-R: 8X, 4X, 2X	Taiyo Yuden, TDK, Ricoh, Mitsui Chemical, Kodak, Fuji Photo Film, Sony, Imation, Philips, Maxell, Mitsubishi Chemical
▪ CD-R: 1X	Taiyo Yuden, TDK, Ricoh, Mitsui Chemical, Fuji Photo Film, Sony, Imation, Philips, Maxell, Mitsubishi Chemical
▪ CD-RW: 4X, 2X	Mitsubishi Chemical, Ricoh, TDK (All are rewritable up to 1,000 times.)

Performance Specifications

Data Transfer Rate	CLV Write/CAV Read
Sustained Read/Write	32X (read only): 4.8MB/sec – Outer track 14X (read only): 2.1MB/sec – Inner track 8X (read/write): 1.2 MB/sec 4X (read/write/rewrite): 600KB/sec 2X (read/write/rewrite): 300KB/sec 1X (read/write): 150 KB/sec
Burst Read/Write	16.7MB/sec (PIO Mode 4, DMA Mode 2)
Average Random Access	170ms
Spindle Motor	Brushless
Error Rate	Mode 1: 1 Block/10 ¹² Bits Mode 2: 1 Block/10 ⁹ Bits

Front Panel

Eject	Eject Button; Manual Emergency Eject; Software Eject
Lights	Power On/Disc Access
Disc Loading	Auto
Headphone Jack	Stereo mini-jack, 0.8V at 32 ohms
Volume Control	Wheel knob
CD-Audio Controls	Stop/Eject

Rear Panel

Power Supply	DC +5V: 500mA DC +12V: 600mA
Interface Connector	IDE bus, 40-pin flat ribbon type. Interface complies with ANSI X3T13/1153D (ATA/ATAPI-4). Supports 59 commands, including special commands for CD-R.
Audio Output	Stereo analog output, Molex connector (L*G*G*R), MPC3 standard
Jumper Switches	Master, Slave, Cable Select

Environmental Conditions

Operating Temperature	0 to 45 degrees Celsius
Performance Guarantee Temperature	5 to 40 degrees Celsius
Operating Humidity	20% to 80% (non-condensing)
Storage Temperature	−40 to 60 degrees Celsius
Storage Humidity	20% to 95% (non-condensing)

Dimensions and Weight

Dimensions (W/H/D) (excluding front panel)	5.78" x 1.64" x 7.95" 146mm x 41.3mm x 202mm
Weight	2.5 lbs. (1.2 kg)

Reliability

MTBF	60,000 POH
Tray Loading	200,000 Load Cycles

Appendix B: Technical Support

Store Plextor's email, web site, phone, and fax numbers in a convenient location. Keep your drive's serial number and a copy of your sales receipt handy as well.

If you experience a problem while installing or operating your PlexWriter drive, please refer first to the relevant sections of this manual regarding setup and installation (Chapters 1–3). If you do not uncover the solution there, please refer next to the maintenance and troubleshooting chapter that begins on page 29. It contains solutions to the most common types of problems fielded by our technical support staff. You may also wish to refer to the Frequently Asked Questions (FAQ) section of our web site to assist you in troubleshooting the problem on your own.

NOTE: We encourage you to go the Plextor web site (www.plextor.com) before attempting to contact Technical Support. The answers to the most common questions callers ask can be found quickly in the FAQ area. A link to the FAQ area can be found on our home page.

If you have not been successful in your quest, our Technical Support Department will help you solve problems that relate specifically to your PlexWriter drive. In many cases, a problem that appears to be caused by your PlexWriter actually originates in another part of your computer. In such instances, our technical support staff will try to help you identify the part at fault and will refer you to the manufacturer of that part for further assistance.

How to Contact Us

There are several ways for you to contact Plextor's Technical Support Department:

- Visit our web site (www.plextor.com) for answers to Frequently Asked Questions.
- Send us email at support@plextor.com, or send a fax to the attention of the Technical Support Department at 408-986-1010. Include your telephone number and the hours during which you can be reached. Be as detailed as possible in describing your problem. Please include system configuration, hardware and software, as well as versions of drivers used.
- Call 800-886-3935 and select the technical support extension.

Before You E-mail/Log On/FAX/Call

Please gather as much of the following information as possible before contacting us.

- The serial number and TLA number of your PlexWriter. Your serial number can be found both on the warranty card that accompanied the drive and on a label on the drive itself. The TLA number appears both on the drive label and on a sticker at the rear of internal drives.
- The version of Plextor Manager you are using, if applicable.
- The latest version of firmware you loaded onto the drive, if applicable.
- The version of the Windows, Mac, or UNIX operating system you are using.
- The brand name and model number of your computer (e.g., Dell 466/NP, Micron P66PCI Powerstation, ALR Evolution V, Apple Macintosh, Performa 575, etc.).
- The type of VGA, Super VGA, or other graphics board you use.
- Brand name and model number of any other peripherals you have installed or connected to your computer (e.g., CD-ROM, scanner, fax board, network board).

Returns

You must receive an RMA (Returned Materials Authorization) number from our Technical Support Department before any Plextor drive can be returned for repair or replacement. Any drive sent to Plextor without an RMA number will not be accepted. Drives must be sent postage prepaid. We recommend that you insure your shipment, as Plextor cannot be held responsible for any damage that may occur during shipment.

Appendix C: Helpful Contacts

Use the contacts below for CD-R and CD-RW software and components, and for PC vendors.

Contacts for CD-R and CD-RW Components

Company	Phone	Fax	Product	Web Address
Adaptec	408-945-8600	408-262-2533	CD-R software	www.adaptec.com
AMC	800-390-9328	425-861-8391	Devices, cables, acc.	cust.svc@amcdirect.com
CeQuadrat	800-330-6734	650-843-3799	CD-R software	www.cequadrat.com
Creative Labs	405-742-6600	405-742-6633	Soundboards	www.creativelabs.com
Creative Digital Research	408-255-0999	408-255-1011	Windows, UNIX CD-R software	www.cdr.com
Diamond	800-468-5846	408-325-7408	Soundboards	www.diamondmm.com
FWB	650-482-4800	650-482-4858	Mac device drivers	www.fwb.com
Pacific Inter Connects	408-654-0234	408-982-9329	Audio cables	www.piccable.com
Plextor	408-980-1838	408-986-1010	Recommend boards, audio cables, all other technical support needs	support@plextor.com BBS: 408-986-1569
Testa CD Labs	520-531-1880		CD-Tach performance benchmarks	http://tcdlabs.simplenet.com

Contacts for PC Vendors

Company	Web Address
IBM	http://ibm.com
Dell	http://dell.com
Gateway	http://www.gw2k.com
Compaq	http://compaq.com
Hewlett Packard	http://www.hp.com/
Intel	http://intel.com
ASUSTeK Computer	http://www.asus.com.tw/
GIGA-BYTE	http://www.giga-byte.com/
ABIT	http://www.abit-usa.com/
Aopen	http://www.aopen-usa.com/
EPOX	http://www.epox.com/
SOYO Computers	http://www.soyousa.com/
Tekram	http://www.tekram.com/
FIC	http://www.fic.com.tw/
Micro-Star International	http://www.msi.com.tw/
I Will	http://www.iwill.com.tw/
ELITEGROUP COMPUTER SYSTEMS	http://www.ecs.com.tw/
Free Computer Technology	http://www.freetech.com/

Index

A

applications software · 22
audio cable · 17
audio CD
 playing · 27
audio output connector · 5
audio, troubleshooting · 34

B

bay cover panel · 14
box
 contents of · 3
 shipping · 3

C

cable
 audio · 17
 IDE · 13
 power for drive · 13
cable connections · 16
cable select · 12
CD
 playing on Macintosh · 28
 reading · 1
 writing · 1
CD Res-Q · 22
CD-Audio · 27
 error messages · 32
 playing · 27
CD-R media · 25
CD-R/RW
 writing to · 28
CD-ROM media · 25
CD-RW
 reading from · 28
CD-RW media · 25
cleaning disc · 26
configuration
 CSEL · 12
connection
 soundboard and · 17
connector
 audio output · 5

contacts · 47
controls
 front-panel · 4, 44
 rear panel · 44
cover panel, bay · 14
CSEL signal · 12

D

device driver · 21
dimensions · 44
disc
 cleaning · 26
 specifications · 43
 troubleshooting · 32
DISC indicator · 4
DMA
 disabling · 30
 enabling · 19
drive
 installing · 12
 recognizing in Windows 95/98 · 17
 recognizing in Windows NT · 18

E

emergency eject hole · 4
enabling DMA · 19
environmental conditions · 44

F

firmware
 revision · 2
front-panel controls · 4, 44

H

headphone jack · 4

I

IDE cable · 13

IDE configuration
 determining · 8
 examples · 11
 selecting · 10
IDE interface connector · 5
IDE ribbon cable
 connecting · 15
installation · 7, 12
 QuickStart · 7

J

jumpers · 5
 setting · 9

M

Macintosh
 playing CD on · 28
 troubleshooting · 39
maintenance · 29
master · 8
mastering software · 5, 23
media · 25
 care and handling · 26
mounting rails · 14, 15

O

opening the computer · 7

P

packet-writing software · 23
performance
 specifications · 43
playing a CD · 27
Plextor Manager
 audio utilities · 28
Plextor Manager 2000 · 22
power cable · 13
power connector · 5
precautions · 6, 9
primary IDE port · 8

Q

QuickStart installation · 7

R

rails · 14, 15
reading a CD · 1
rear panel controls · 44
recognizing the drive in Windows 95/98 · 17
recognizing the drive in Windows NT · 18
recording
 frequently asked questions · 41
reliability · 44
returns · 46
RMA number · 3, 46

S

secondary IDE port · 8
security sticker · 3
selecting an IDE configuration · 10
serial number · 12
shipping your drive · 3
slave · 8
software
 application · 21
 device drivers · 21
 installing · 21
 mastering · 5
soundboard
 connection and · 17
specifications · 43
speed
 reading · 1
 writing · 1
support · 45

T

technical support · 45
TLA code · 12
tray
 front door · 4
 loading and unloading · 25
troubleshooting
 audio problems · 34
 disc problems · 32
 general problems · 30
 Macintosh installation · 39
 writing discs · 35

U

upgrading · 2

V

volume control · 4, 27

W

weight · 44

writing
 frequently asked questions · 41
writing a CD · 1
writing discs
 troubleshooting · 35
writing to CD-R and CD-RW · 28

[illegible]